

SiGN Smart Home WiFi Siren

User Manual

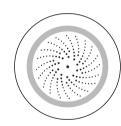



Product Configuration

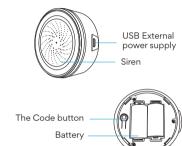

Notice: Pleases use USB power supply, the backup battery can only work for two days.Plug in the USB power supply and load the battery at the same time, then the sensor will work in priority.

Specifications

USB Power adapter: 5V/1A Sound intensity: 90db/1M Wireless type: 2.4GHz

Wireless standard: IEEE 802.11b/g/n

Wireless range: 45M

Operating Temperature: 0°C ~ 40°C (32°F ~ 104°F)

Operating Humidity: 20% ~ 85%

Storage Temperature: 0°C ~ 60°C (32°F ~ 140°F)

Storage Humidity: 0% ~ 90% Size: 68 mm x68 mm x33mm

LED State

Device Status	LED State
Smart Wi-Fi	Indicator flashes quickly
AP mode	Indicator flashes slowly
Triggered	The indicator will rapidly blink,
	and OFF after scheduled time
	Indicator lights up for 4s and after
Reset	2 seconds lights off, device goes
	into configuration mode

How to reset?

- (1) Press the reset button for 6 seconds till the indicator flash rapidly. Then device turns to smart wifi mode.
- (2) Press the reset button again for 6 seconds till the indicator flash slowly. The device turns to AP mode.

SiGN Smart Home App

Download APP Download the "SiGN Smart Home" app from App Store or Google Play to your mobile.

2. Register and Login

- Launch the app.
- Register and log in to the app.
 Login if you have an account already.

3. Add Device

- Power on the smart sensor which default's mode is Smart WiFi mode.
- Select the "+" symbol on the top right-hand corner.
- Select your product type and follow the instructions of the app.
- If the connecting fails,try using AP Mode.
- On the "Add device" page select "AP Mode" on the top right-hand corner and follow the instructions of the app.

Experience Advanced Features

You can experience the various advanced features of the product with the app, just try and do it yourself.

Main fuction

SiGN Smart Home

Available on the APP Store

Setting Alarm duration and alarm sound type
Scheduled alarm: it will have around 30s deviation

Linkage alarm setting

To connect two Sensors via scene setting.

Device sharing

Allow others to control the device

Push notification


Open/close push notification

Remove device

Restore default settings; Delete and add the device again to clear the record by APP.


SiGN Smart Home WiFi Siren

SWE - Användarmanual SNSN-SIREN





Produktkonfiguration





Vänligen använd USB strömtillförsel, Back-up batteriet kan endast användas i två dagar. Koppla in USB och ladda batteriet samtidigt.

Produktspecifikation USB strömadapter: 5V/1A

Liudintensitet: 90db/1M

Trådlös standard: IEEE 802.11b/g/n

Förvaringstemperatur: 0°C~60°C

Storlek: 68 mm x 68 mm x 33mm

Trådlös typ: 2.4GHz

Trådlöst avstånd: 45m

Driftfuktighet: 20%~85%

Driftstemperatur: 0°C~40°C

Lagringsfuktighet: 0%~90%

LED status Enhetsstatus Smart Wi-Fi Indikator blinkar snabbt AP mode Indikator blinkar långsamt Indikator blinkar snabbt, och stängs av efter schemalagd tid Återställning konfigurationsläge.

Återställning

- (1) Tryck på återställningsknappen i 6 sek tills indikator blinkar snabbt. Enheten övergår till smart wifi-läge.
- (2) Tryck på återställningsknappen igen i 6 sek

LED status

Indikator lyser i 4 sek och efter 2 sekunder slutar lysa, enhet går i

Play till din mobil.



2. Registrera och logga in





- Starta appen.
- Registrera dig och logga in på appen. Logga in om du redan har ett konto.

3. Lägg till enhet

- Slå på den smarta sensorn vars standardläge är Smart WiFi-länge.
- Välj "+" symbolen i det övre högra hörnet.
- Välj din produkttyp och följ instruktionerna för appen.
- Om anslutningen misslyckas, försök att använda AP-läge.
- På sidan "Lägg till enhet" välj "AP-läge" i det högra övre hörnet och följ instruktionerna för appen.

Upplev avancerade funktioner

Man kan uppleya produktens olika ayancerade funktioner med appen.

Huvudfunktion

Ställ in larmlängd och larmljudtyp. Schemalagt larm: det kommer att ha cirka 30 sek avvikelse.

Larminställning för koppling

För att ansluta två sensorer.

Enhetsdelning

Tillåt andra att styra enheten.

Push-meddelande

Öppna/stäng push-meddelande.

Ta bort enhet

Återställ standardinställningarna: Ta bort och lägg till enheten igen för att ta bort tidigare information i app.

Spares Nordic AB Lärkträdsgatan 2B 213 63 Malmö, Sweden



